

NETWORK SM-5100

MASTER :

01. <0>141
02. 048 → 1 , SCHAAL NUMMER
03. 050 → 1 , MASTER / SLAVE
04. 520 → 1 , FLOATING
05. 135 → 1 , SCHAAL IP NUMMER
06. 194 → 1 , SERVER IP NUMMER
07. <0>0416 , 192.168.001.001 , SCHAAL IP
08. <0>0417 , 192.168.001.001 , SERVER IP
09. <0>0418 , 255.255.255.000 , SUBNET MASK
10. <0>0421 , 192.168.001.001 , GATEWAY

SLAVE :

01. <0>141
02. 048 → 2 , SCHAAL NUMMER
03. 050 → 0 , MASTER / SLAVE
04. 520 → 2 , FLOATING FUNCTION
05. 135 → 2 , SCHAAL IP NUMMER
06. 194 → 1 , SERVER IP NUMMER
07. <0>0416 , 192.168.001.002 , SCHAAL IP
08. <0>0417 , 192.168.001.001 , SERVER IP
09. <0>0418 , 255.255.255.000 , SUBNET MASK
10. <0>0421 , 192.168.001.001 , GATEWAY