

Programmeerlayout verhoogd toetsenbord (RK):

PAGE UP	YES/NO	PAGE DOWN	BACK SPACE
@/FOR PRT SCR	CLEAR ESC	PLU	DOUBLE
7	8	9	SPACE
4	5	6	SPACE
1	2	3	SPACE
0	00	.	CAPS

A	G	M	S	Y
B	H	N	T	Z
C	I	O	U	Ä / ä
D	J	P	V	Ö / ö
E	K	Q	W	Ü / ü
F	L	R	X	€ / @

% / &	# / *
(/ +) / =
- / "	! / ?
, / .	> / <
ENTER	